



No: 97117-184
Subject: Truck/Bus Suspension Maintenance
Date: August 2007 **Revision:** A

Truck & Bus Suspension Maintenance Schedule

Service Interval	Kms	PRIMAAX	HAS	HN	COMFORT AIR	PARASTEER	AR2	R/RS	RT	RTE		
Installation		I/C	I/C	I/C	I/C	I/C	I/C	I/C	I/C	I/C		
Pre-Delivery		I/C	I/C	I/C	I/C	I/C	I/C	I/C	I/C	I/C		
At	1,500				I/C							
At 1st Service or	4,500	I/C	I/C	I/C		I/C	I/C	I/C	I/C	I/C		
Every	15,000		I				I	I		I/L *		
Every	25,000	I										
Every	30,000		I/C				I/C	I/C	I/C			
Every	40,000			I	I	I						
Every	50,000	I/C										
Every	60,000											
Every	80,000			I/C	I/C	I/C						

* Only Suspensions with Bronze Centre Bushes.

NOTE: Hendrickson Asia Pacific require that all Hendrickson suspensions MUST have all hardware tensions checked initially at the following intervals:

1. Installation
2. Pre-Delivery
3. First Service

KEY	
I	Inspect
I/L	Inspect/Lubricate
I/A	Inspect/Adjust as Required
I/R	Inspect/Replace as Required
I/C	Inspect/Check Torques
L/A	Lubricate/ Check Adjustment
L	Lubricate

Note: Maintenance intervals may vary depending on OEM requirements. This maintenance schedule is Hendrickson Asia Pacific's recommended intervals.