



TRAILER AIR SUSPENSIONS

TECHNICAL BULLETIN


No: 97117-158

Subject: Improved Reverse lock

Date: January 2007 **Rev:** B

This kit is designed to improve the Reverse lock as fitted by the trailer OEM.

1. Mount the QR valve (2), ideally in a position between the two steer axles.
2. Take the supply from the Solenoid Valve (1) (Supplied by Trailer manufacturer) and couple it to the No1 (*top*) port on the QR Valve (2)
3. Take a air line from each of the Reverse lock air chambers and fix to the No2 and No3 ports on the QR valve. (*These will be the side ports*).
4. Fit the 3/8" – 1/4" BSP adaptor to the No 4 Port (*Not Shown*)
5. Screw the retention valve (3) into the adaptor.
6. Screw the Exhaust filter (4) into the retention valve (3)

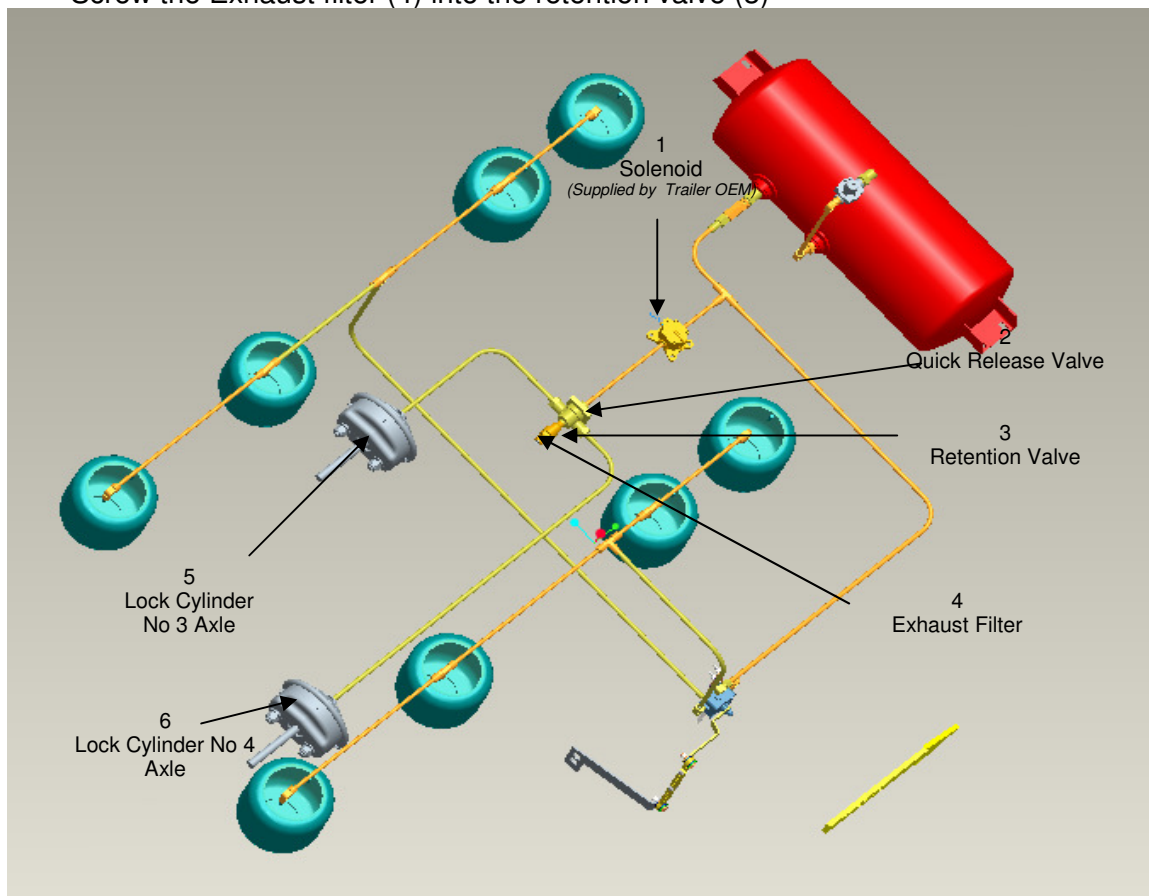

Ref:	Item	Parts Required	
		Qty	Part No:
2.	QR Valve	1	NPN (Sealco or Similar)*
	Adaptor	3	(As Required)
3.	Retention Valve	1	98732-023
4.	Exhaust Filter	1	98732-012

(*Available as Z-780210b or similar from TruckStops NZ)